MEDIWARE®

MW PHARM ++

MwPharm – How to delete or restore drug

Mediware a. s. | Evropská 655/116 | 160 00 Praha 6 | email: support@mediware.cz| http://www.mediware.cz

Title	How to delete or restore drug
Author	George Dousa
Revision	1.01
Date	12/04/2017

DOCUMENT HISTORY

Revision	Date	Author	Description
1.00	18/04/2016	George Dousa	1st revision
1.01	12/04/2017	George Dousa	2nd revision

1 How to delete the drug 3

2 How to delete the drug ´ s model 4

3 How to insert/restore the drug 5

4 How to add a new model for the drug 8

1 How to delete the drug

Run the program and go to the tab „Case“, select the drug you want to delete and click on button "Delete" under the left column.

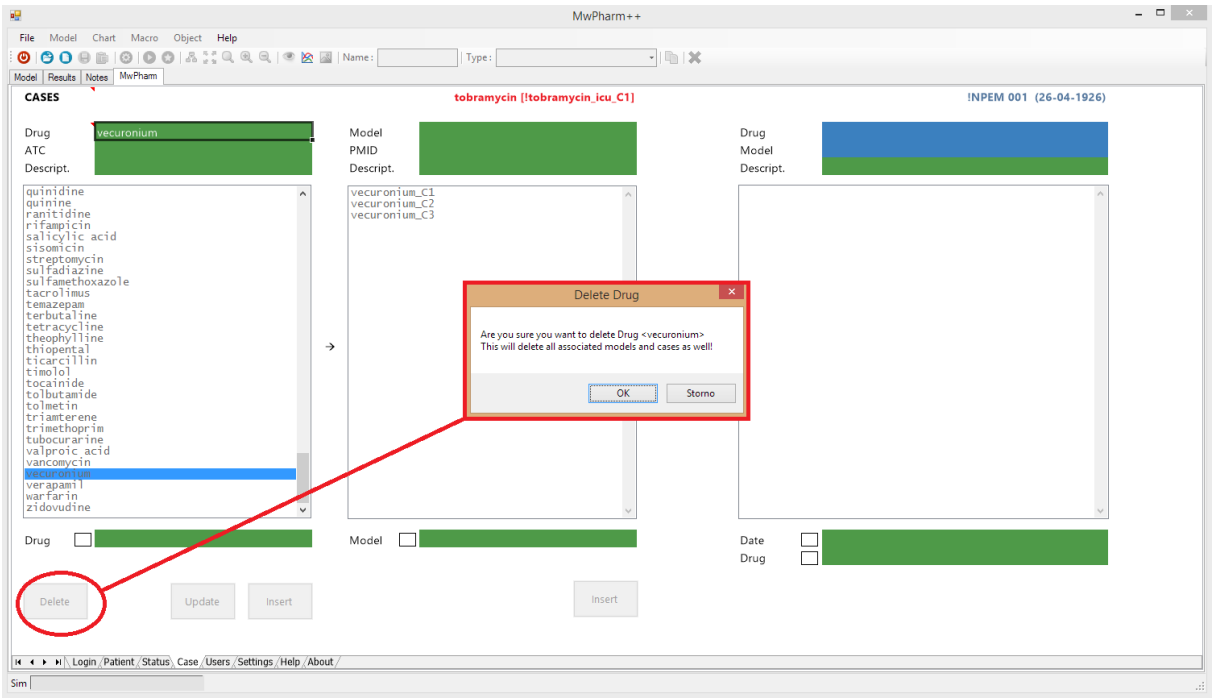

If you really want to delete the drug, confirm the dialog.

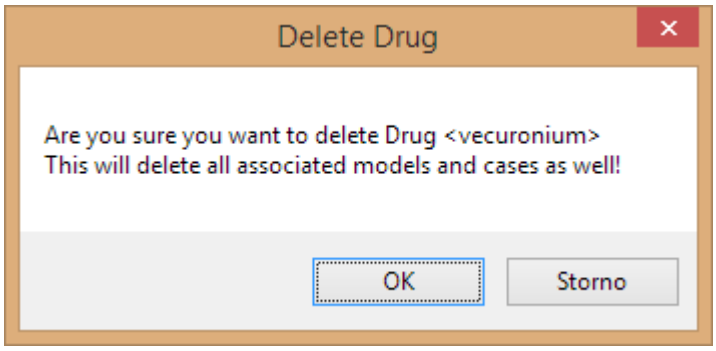

2 How to delete the drug´s model

Run the program and go to the tab „Case“, select the drug and the drug´s model (in the middle column) you want to delete and click on button "Delete" under the middle column.

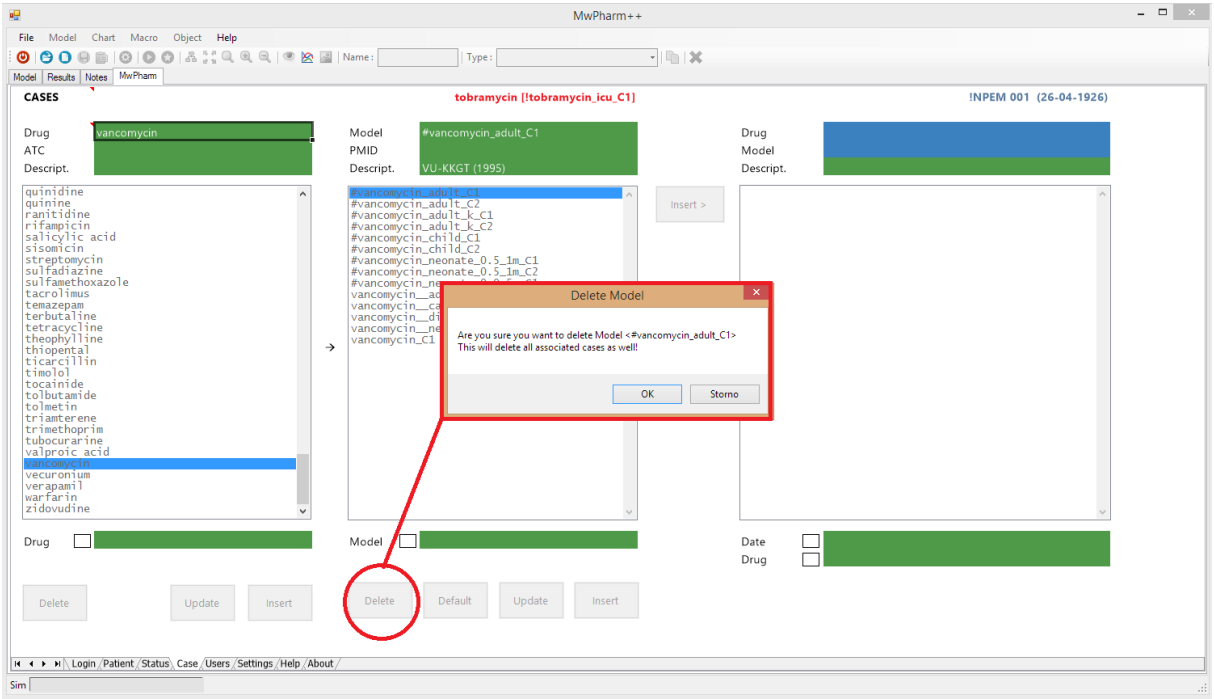

If you really want to delete the model, confirm the dialog.

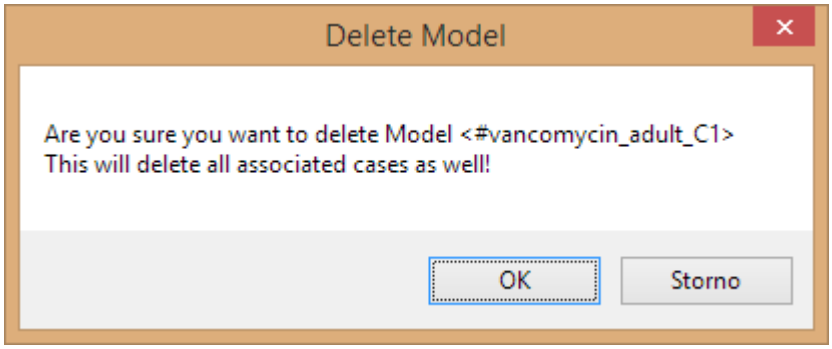

3 How to insert/restore the drug

Run the program and go to the tab „Case“, fill in the details about the new drug in the left column and click on the button „Insert“ under the left column.

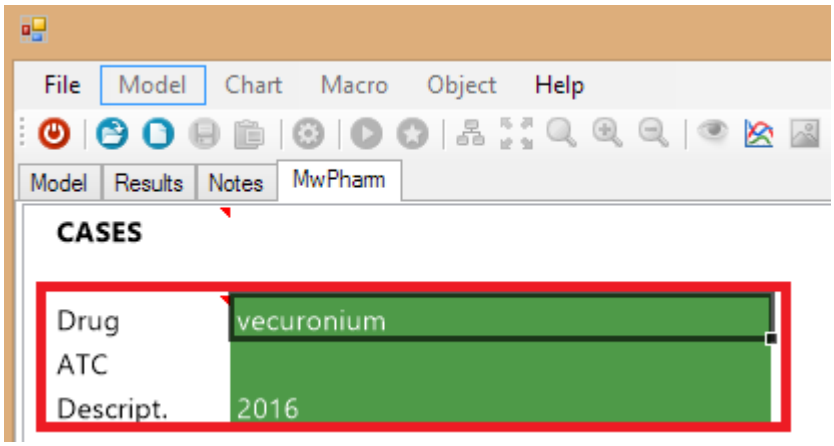

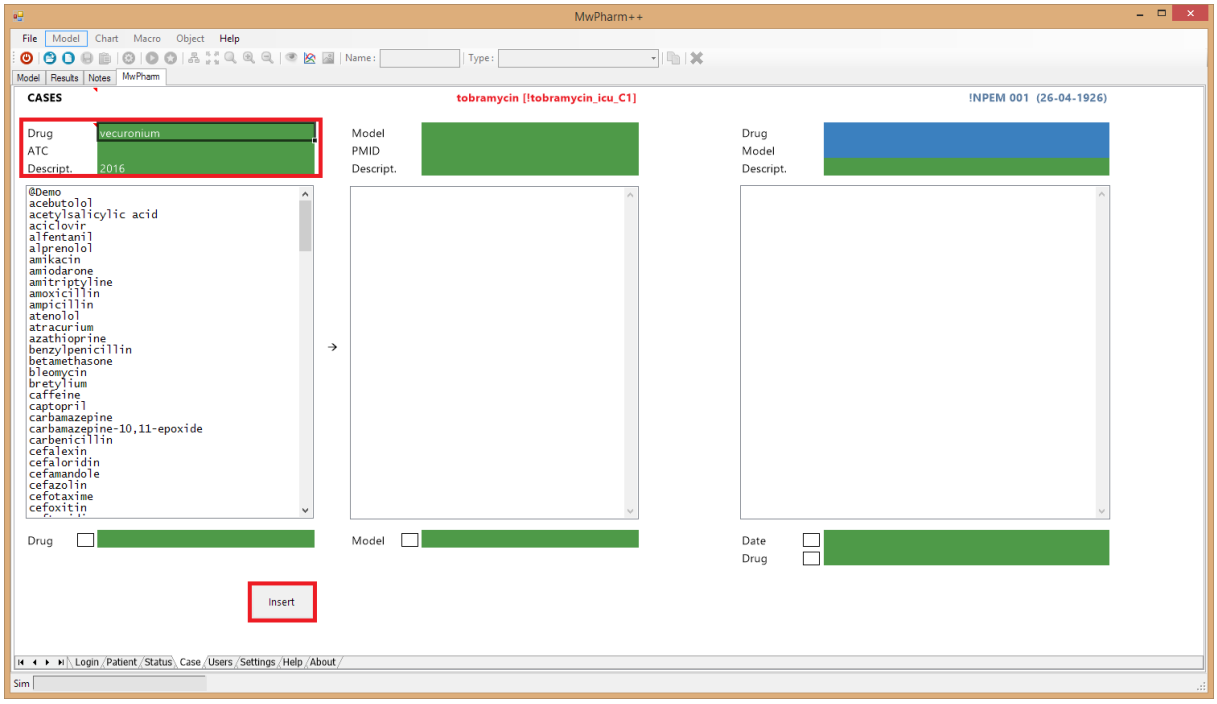

The name of new drugs appear in the list of drugs and program automatically preselect the drug. For a given drug is not exist any model yet (middle column is empty).

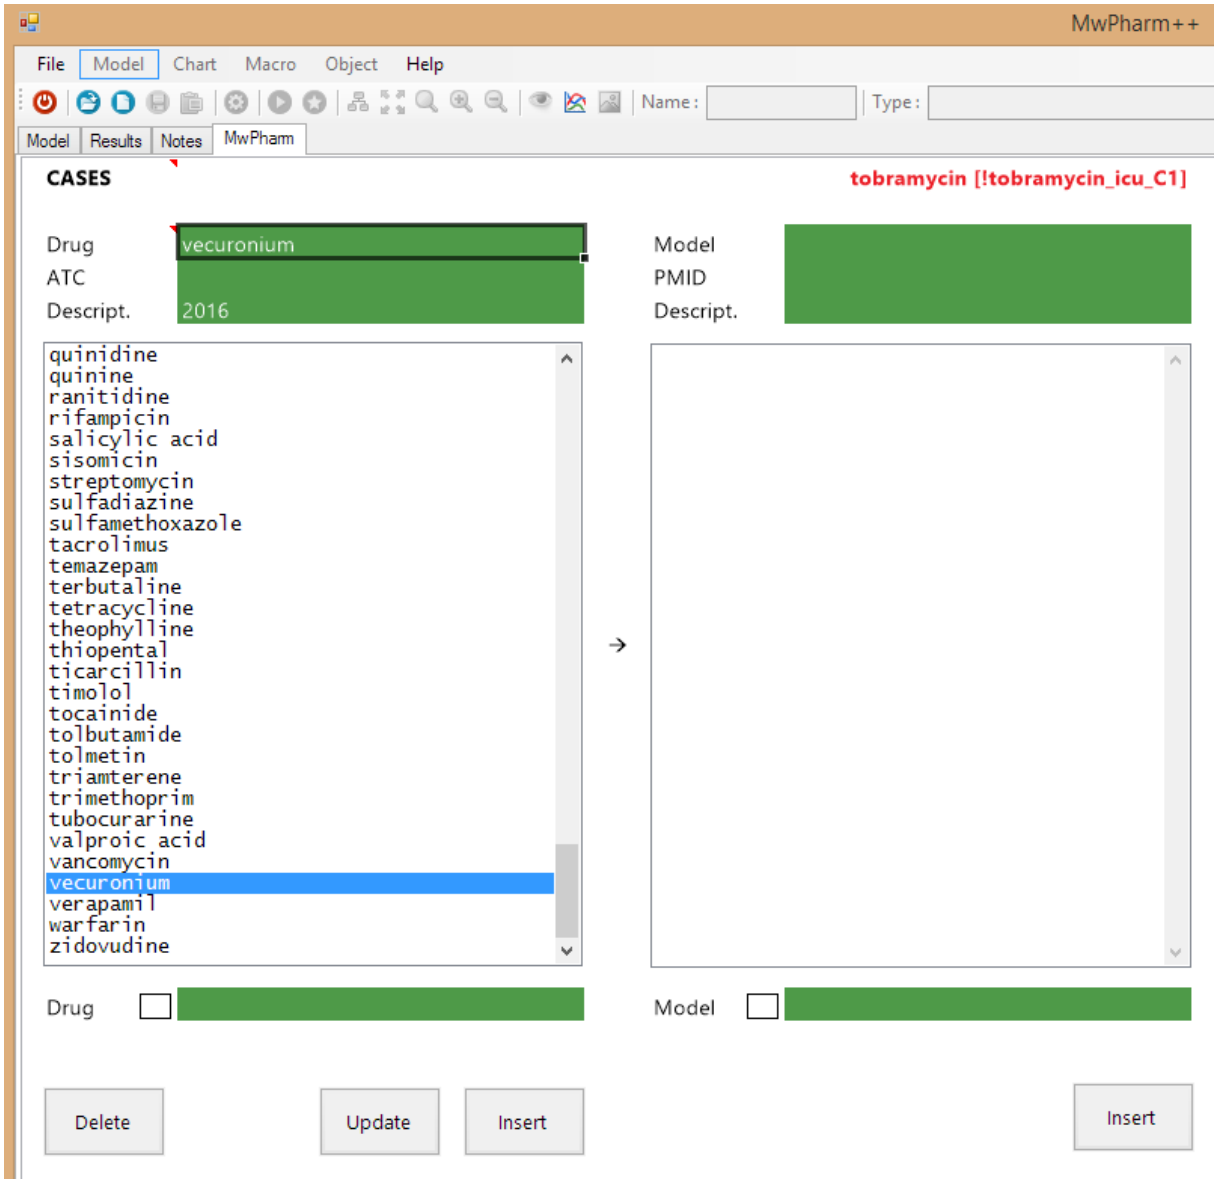
MwPharm++
File
Model
Chart
Macro
Object
Help
Name :
Type :
Model
Results
Notes
MwPharm
CASES
tobramycin [!tobramycin_icu_C1]
Drug
ATC
Descript.
vecuronium
2016
Model
PMID
Descript.
quinidine
quinine
ranitidine
rifampicin
salicylic acid
sisomicin
streptomycin
sulfadiazine
sulfamethoxazole
tacrolimus
temazepam
terbutaline
tetracycline
theophylline
thiopental
ticarcillin
timolol
tocainide
tolbutamide
tolmetin
triamterene
trimethoprim
tubocurarine
valproic acid
vancomycin
vecuronium
verapamil
warfarin
zidovudine
Drug
Model
Delete
Update
Insert
Insert

4 How to add a new model for the drug

Run the program and go to the tab „Case“, select a drug (in the left column) for which you want to insert a new model and click on the button „Insert“ under the middle column.

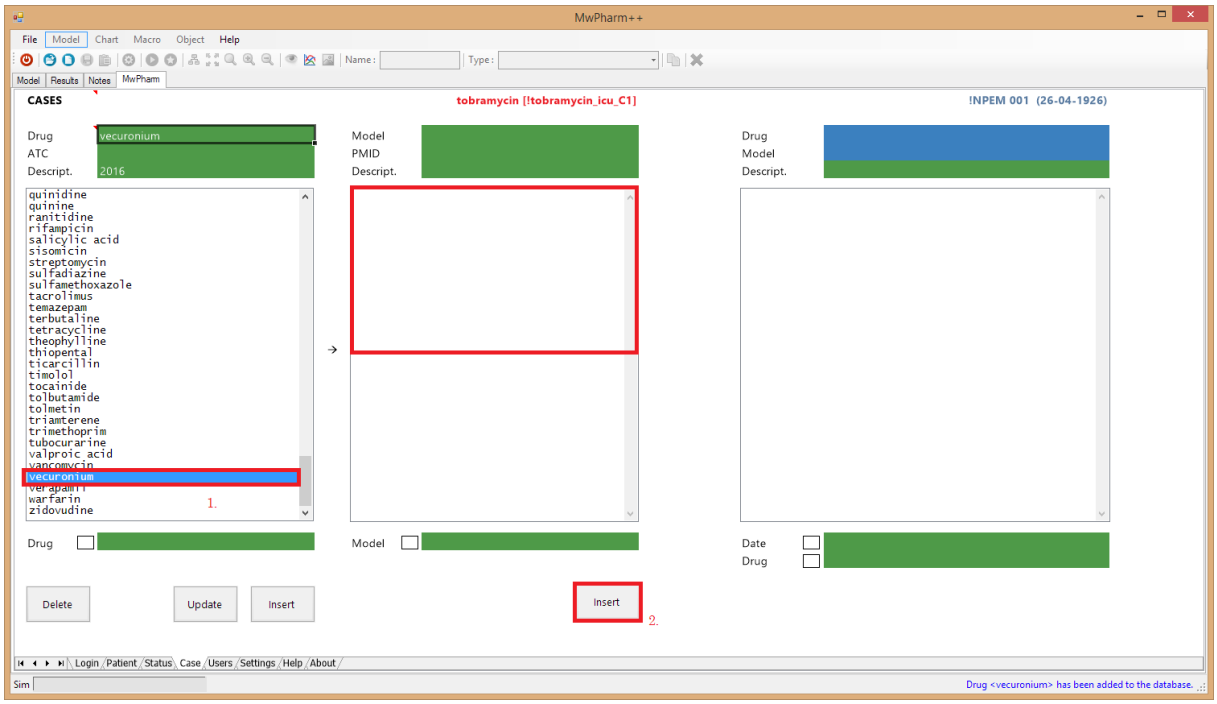

Then select the model file. Backup of all default models is in the folder „Mediware\MwPharm++\Models\EDX\MwPharm++“ and click on button „Open“

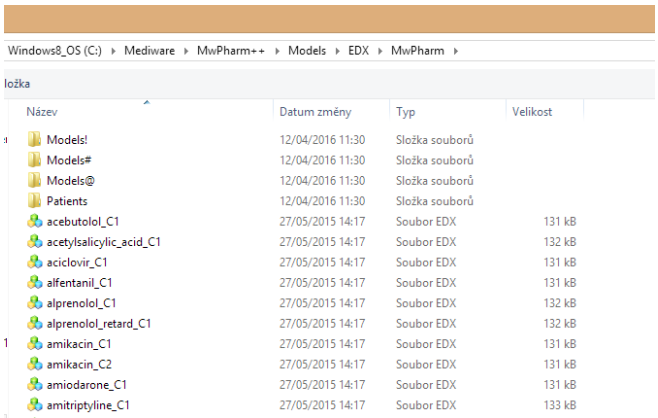

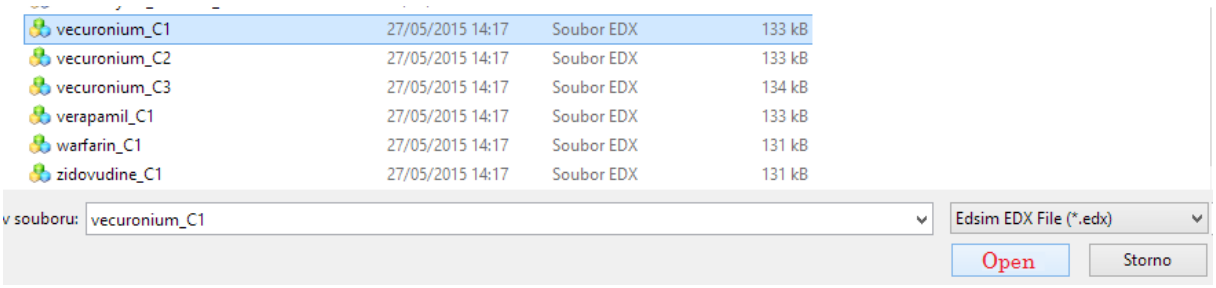
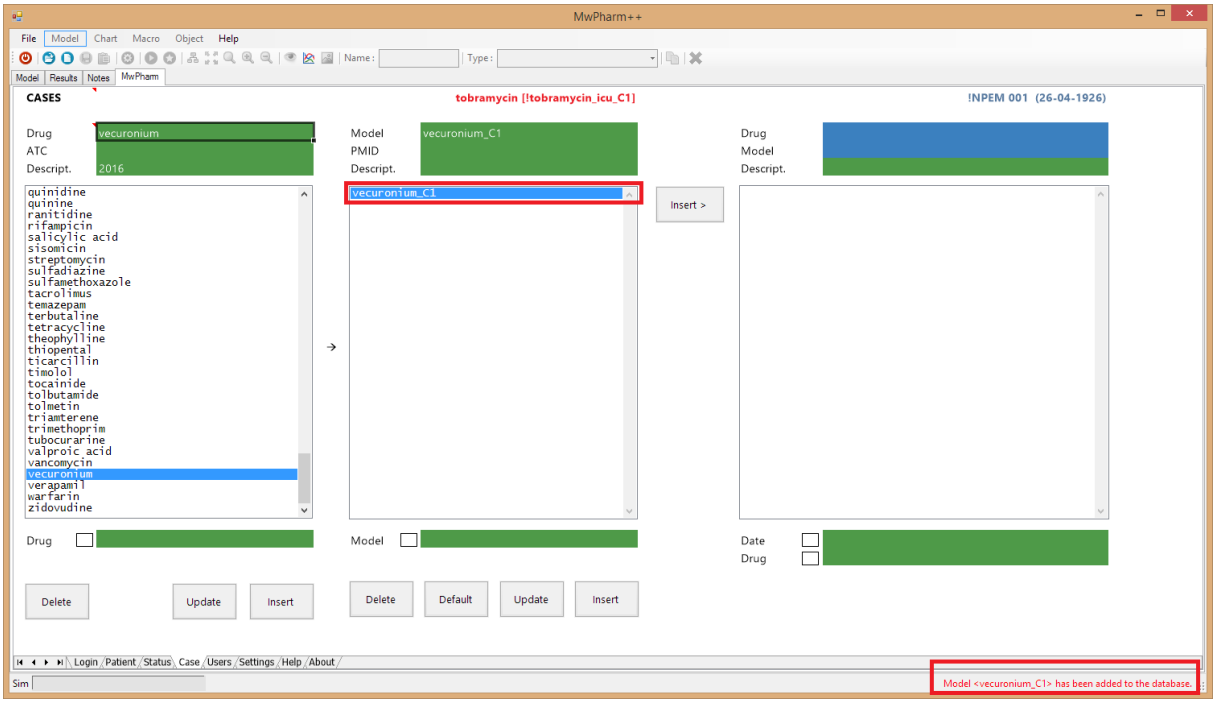
Than the new model will appear in the list (middle column).